


PARTS ENCLOSED

- (A) Nut Connector(3)
- (B) Mounting Screws(2)
- (C) Mounting Plate(1)
- (D) Canopy(1)
- (E) Stop screws(8)
- (F) Canopy Screw(4)
- (G) Cable Line(4)
- (H) Glass Shades(24)
- (I) Cable Line(4)

(L) Caps (24)

(M) Allen Screwdriver

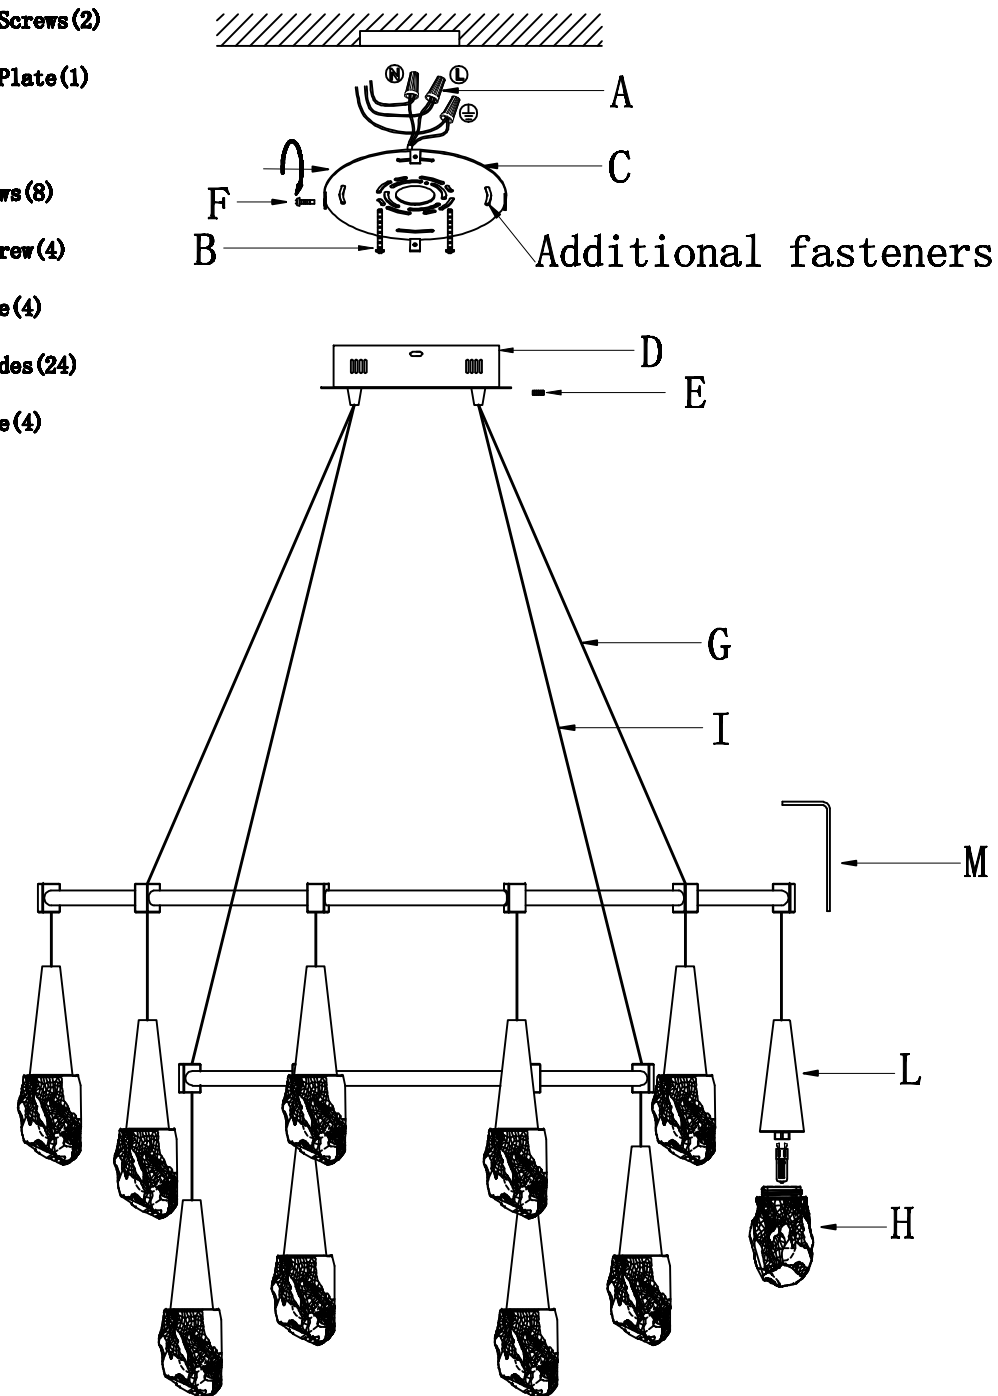

KCH3104-18BS

Assembly Instructions

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.


WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Remove Mounting Plate (C) from Canopy (D) by removing Canopy screw (F)
3. Attach Mounting Plate (C) to the ceiling and secure with Mounting Screws (B) and use 4 additional fasteners to enforce the ceiling attachment .Based on the ceiling structure,please find the proper from your local hardware store.
4. Based on the ceiling height, if needed, reconfigure the suspension height by adjusting cable (G) (I) lengths - see HEIGHT ADJUSTMENT INSTUC on page 3
5. Fine-tune the suspension height of each cable (G) (I), lock each suspension cable by tightening the Stop screws (E) with an Allen Screwdriver.
6. Carefully inspect the fixture's wires. The NEUTRAL FIXTURE WIRE is marked with 'N'. The Hot FIXTURE WIRE is marked 'L'. The unmarked GREEN wire is GROUND WIRE.
7. Attach the fixture Ground Wire (green or green/yellow) to the ground wire from the ceiling outlet box (usually green insulation or bare wire) or with a plastic wire connector (A) and wrap the connection with electrical tape. If your outlet box DOES NOT have a Ground Wire, be sure to insert the Green Ground Screw into the mounting Plate (C). Wrap the fixture's GROUND WIRE around the ground screw. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME IS PROPERLY GROUNDED.
8. Connect the neutral wires from the ballast (white) to the neutral outlet wire (usually white) with a plastic wire connector (A) and wrap the connection with electrical tape.
9. Connect the hot wires (black) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED
10. Attach Canopy (D) with the fixture to the affixed Mounting Plate (C) and secure with Canopy screw (F)
11. Repeat the previous step 5 if needed.
12. Insert LED G9 Bulbs into each of the sockets.
13. Insert the top threaded portion of Glass Shades (H) into Caps (L) and turn in a clockwise direction until snug. Do not overtighten. When replacing Bulbs, always make sure Glass Shades (H) are securely tightened to Caps (L) for safety. Note: Do not inadvertently loosen Glass Shades (H) from Caps (L) when cleaning or Glass Shades (I) could fall unexpectedly, creating a safety hazard
14. Restore power to outlet box and check operation of fixture.
15. Assembly is complete

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

HEIGHT ADJUSTMENT INSTRU-

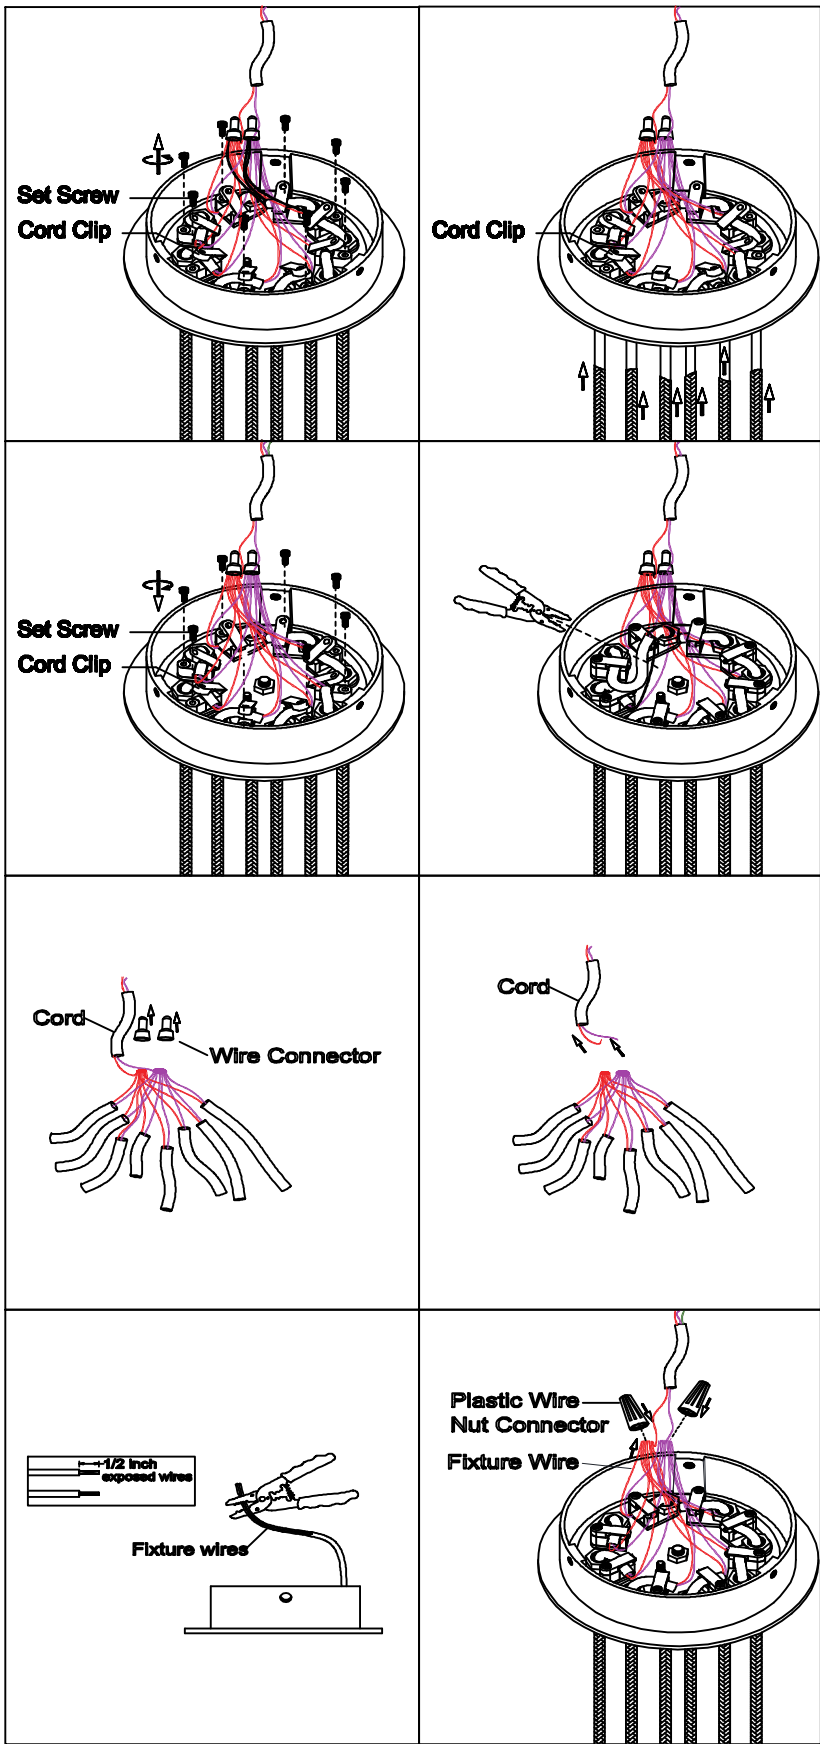

- 1.* Loosen the set screws on top of the cord clips using the Screwdriver
- 2.* Determine the hanging length for each of the Glass Shades
Pull the hanging cords out through the cord clips and extend to ceiling height (refer to illustrations on following pages).
- 3.* Replace the screws and tighten to lock hanging cords in place using the Screwdriver.
- 4.* Cut off the excess wires with a wire cutter.
- 5.* Remove the wire connectors using pliers.
- 6.* Take apart the connection cord and set aside.
- 7.* Use a pair of wire strippers to remove about 1/2" of insulation from each wire.
- 8.* Reconnect the wire ends and secure with the plastic nut connectors.

Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents

