



### IMPORTANT SAFETY INSTRUCTIONS

- These instructions are provided for your safety. It is important that they are read carefully and completely before installing the chandelier.
- **THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH APPLICABLE INSTALLATION CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.**
- We strongly recommend that an authorized and certified electrician install all direct wire fixtures.
- This fixture has been rated from **18 x 40watt Max E12** standard bulb(not included).To avoid the risk of fire, do not exceed the recommended wattage.
- The light fixture is meant for indoor use. DRY LOCATION ONLY. It must be connected only to 3-wire. Single-phase electrical systems (provided with Ground wire or equivalent protection system).
- **Keep it away from children.**

### WARNING:

- Turn-off electricity supply at main circuit panel before installing. Do not connect electricity supply until your chandelier is fully assembled and installed.
- To reduce the risk of fire, electrical shock, or personal injury, always turn off the chandelier and allow it to cool
- Prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at light bulb.
- Keep flammable materials away from light bulb.

### PRE-ASSEMBLY:

- Remove all parts and hardware from box along with plastic protective packaging. **Do not** discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- For your safety and convenience, assembly by two people is recommended

### TO ASSEMBLY:

**SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.**

1. Remove all parts from the package and remove all plastic coverings.
2. Using link loops (H), attach the top end of each of the three hanging poles (I) to the collar loop (G) and the bottom end to the upper-tier ring of the fixture body (J).
3. Using link loops (H), attach the top end of each of the three hanging poles (K) to the upper-tier ring (J) and the bottom end to the lower-tier ring of the fixture body (M).
4. Adjust the hanging chain to the desired length. Use a link loop (F) to attach the chain to the collar loop (G) and the hanging loop under the canopy (E).
5. Attach the mounting bar (B) to the outlet box using the supplied screws (C).
6. Gently pull the wiring from the outlet box and let the wires hang.
7. Connect the fixture's wires to the corresponding wires in the outlet box:
  - 7.1 Ground Wire: Connect the fixture's unmarked green wire to the outlet's ground wire (green or bare) using a plastic wire connector (A). Wrap with electrical tape.
  - 7.2 Neutral Wire: Connect the fixture's wire marked 'N' to the outlet's neutral wire (white) using a wire connector (A). Wrap with electrical tape.
  - 7.3 Hot Wire: Connect the fixture's wire marked 'L' to the outlet's hot wire (black) using a wire connector (A). Wrap with electrical tape.
8. Tuck the wire connections neatly into the ceiling junction box.
9. Move the canopy (E) up to the ceiling and secure it with the outer ring. Ensure the chain, not the power cord, supports the fixture's weight.
10. Install the bulbs (not included), and turn on Power.


### PARTS ENCLOSED:

- (A) Wire Connectors (3)
- (B) Mounting Bar (1)
- (C) Mounting screw (3)
- (D) Green Ground Screw (1)
- (E) Canopy & Chain (1)
- (F) Link Loop (1)
- (G) Collar Loop (1)
- (H) Link Loop (12)
- (I) Connecting Pole 1 (3)
- (J) Upper Tier Fixture (1PCS)
- (K) Connecting Pole 2 (3)
- (L) Blubs (18)
- (M) Lower Tier Fixture (1)

### TOOLS REQUIRED:

- **Philips screwdriver**
- **Electrical tape**
- **Wire cutters**

### MODEL: H23107T-18

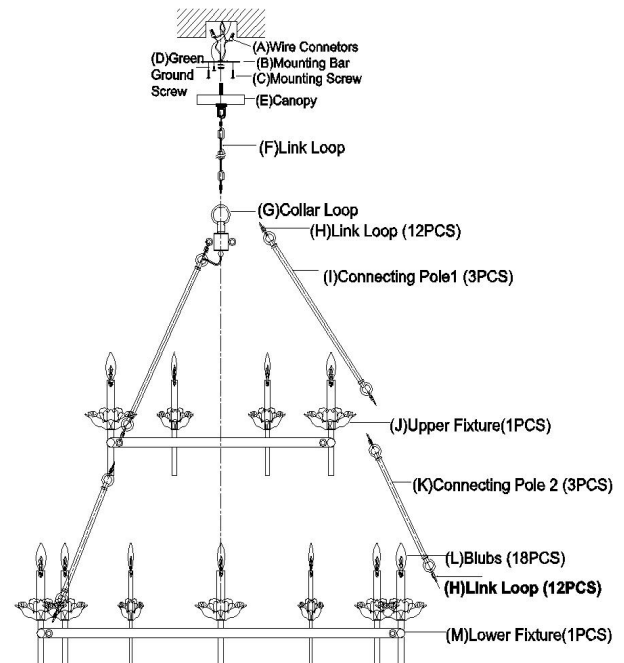

### CARE INSTRUCTIONS:

1. Make sure that power is turned off and bulb has cooled before handling.
2. Wipe clean with a dry cloth/mid soapy solution. Do not use corrosive cleaners.
3. The cable/cord of the chandelier cannot be replaced. If the cable is damaged, do not use the light.