


## Parts List

- (A) Wire Connectors ×2
- (B) Screws ×2
- (C) Mounting Bracket ×1
- (D) Ceiling Canopy ×1
- (E) Decorative Ball Nuts ×2
- (F) 15.7" Down rods ×3
- (G) 7.9" Down rods ×1
- (H) Screws ×3
- (I) Fixture Frame ×1
- (J) Screws ×18
- (K) Rubber Gaskets ×18
- (L) Decorative Ball Nuts ×18
- (M) Bamboo-style glass Plates ×18
- (N) Electrical Wire ×1
- (O) Bare Copper Ground Wire ×1
- (P) Locking Clips Nuts ×1
- (Q) Gasket ×1

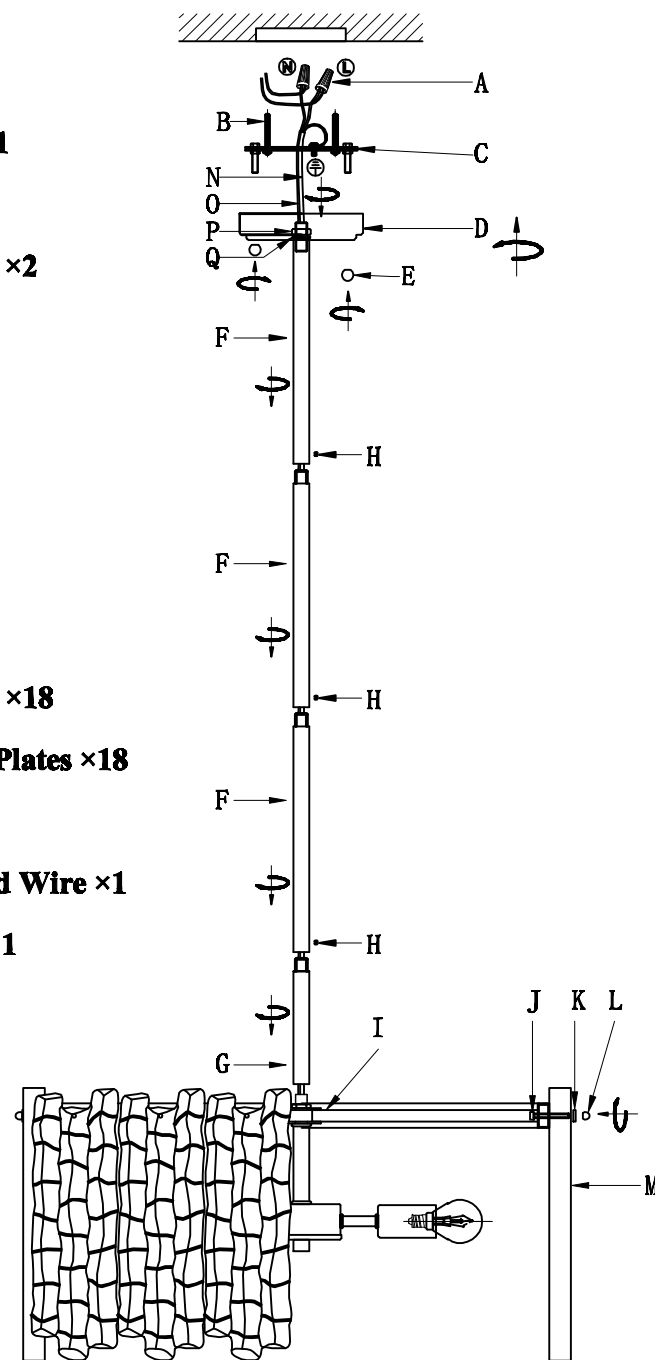

**KCH4105R-8**

## Assembly Instructions

**Recommended:** Installation should be performed by a qualified electrician.

**Warning:** Before installation, turn off the main power supply at the fuse box or circuit breaker.

1. Carefully remove all parts from the box.
2. Determine the required number of down rods (F)/(G) based on the desired hanging height.  
Thread the electrical wire (N) and the bare ground wire (O) through the selected down rods (F)/(G), then through the ceiling canopy (D) and install the locking clips (P) and gasket (Q). Attach the down rods to the fixture frame (I).
3. Secure the down rods in place with screws (H).
4. Use screws (B) to fix the mounting bracket (C) to the ceiling junction box.
5. Connect the electrical wires using the wire connectors (A), then tuck the wires neatly into the junction box.
6. Push the ceiling canopy (D) up to cover the mounting bracket (C) and secure it in place using the decorative ball nuts (E).
7. Install bulbs into the sockets.
8. Remove the decorative ball nuts (L) and rubber gaskets (K) from the fixture frame, install the bamboo-style plates (M), and then reattach the gaskets (K) and decorative ball nuts (L).
9. Once installation is complete, turn the power back on at the fuse or circuit breaker.

## Cleaning Instructions

Use only a dry, soft cloth to clean. Do not use abrasive materials or chemical cleaners.