


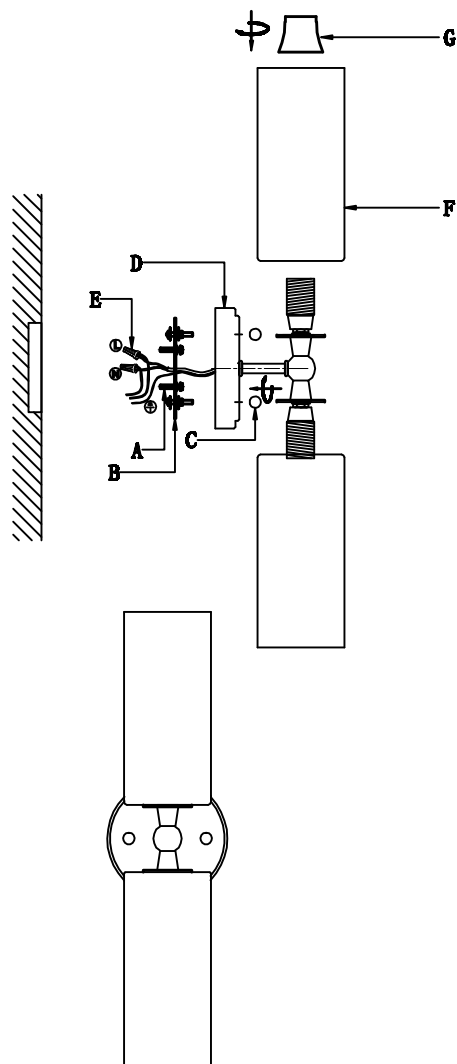

KWS0108-2ANB

Assembly Instructions

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

1. Carefully remove all parts from the box
2. Loosen mounting bracket from base (B) Side screw (C)
3. Fix the mounting bracket (B) on the outlet box with screw (A).
4. Make sure the power is off
5. Hold the lamp body and wrap the two safety cables with nipple (E). Press the lamp body (D) on the bracket (B) and secure it with a nut (C).
6. Install the glass lamp shade (F) on the lamp post and fix it with the lamp ring (G).
7. After installation, switch on the fuse or circuit breaker.

*****Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents*****

