
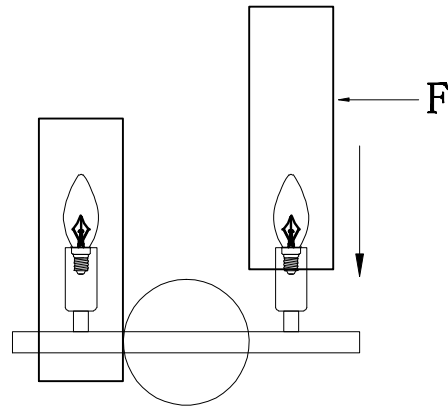


KWS0133-2MBR

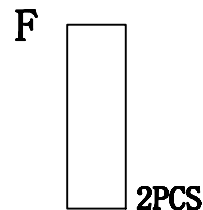

Assembly Instructions

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

- 1.Carefully remove all parts from the box**
- 2.Remove the mounting bracket (C) from the base(D) by loosening the screws (E)**
- 3.Affix the mounting bracket (C) on the outlet box with the screws (B).**
- 4.INSURE THE ELECTRICITY SUPPLY IS TURNED OFF**
- 5.Wrap both safety cables with nipples (A) , push the base (D) on the bracket (C) and then affix it with screws (E)**
- 6.Install the bulbs on the sockets, and then install the glass pipes (F) on the sockets according to the illustration**
- 7.Install the bulb on the sockets**
- 8.Installation is complete, turn on power at fuse or circuit breaker.**

*****Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents*****

