


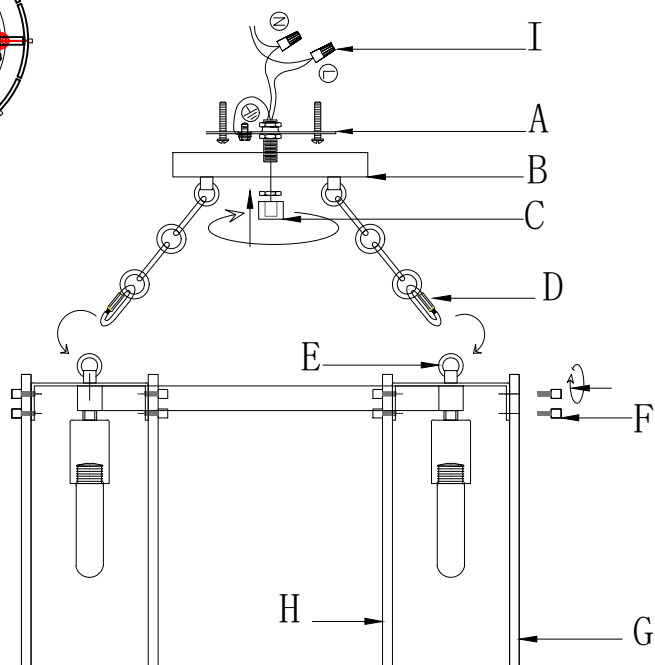


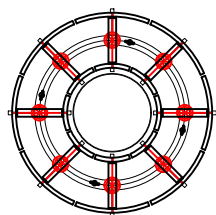

KFM4106-8

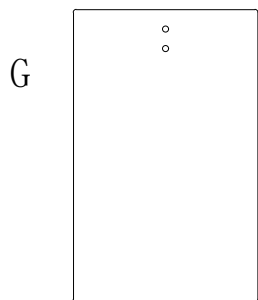

(8clusters)

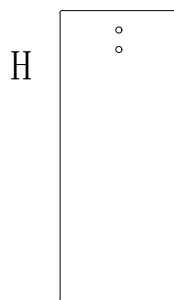

(8clusters)

Assembly Instructions

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

1. Unscrew the latch (D) into the ring (E) and tighten.
2. Put the wire through the chain link into the disc (B).
3. INSURE THE ELECTRICITY SUPPLY IS TURNED OFF
4. Remove the bracket (A) and fix the bracket (A) in the specified junction box.
5. Wrap both safety cable with nipples (I), push the cable into the outlet box.
6. Cover the disc (B) on the junction box and tighten it with a cylindrical nut (C).
7. Fix the glass pieces (G) and (H) to the light frame with screws (F).
8. Install the E26 bulbs on the sockets
9. Installation is complete, turn on power at fuse or circuit breaker.

Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents

