
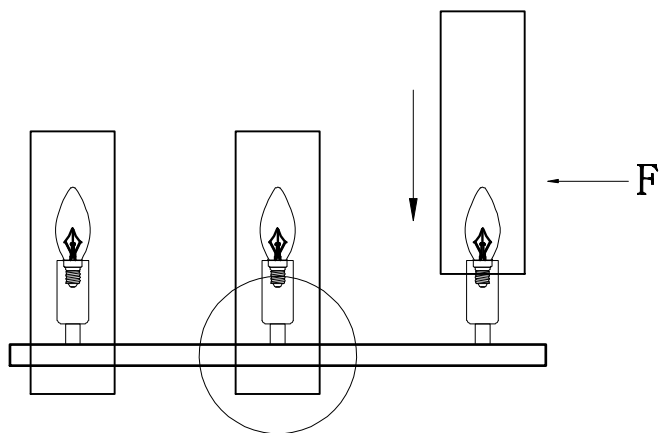


KWS0133-3MBR

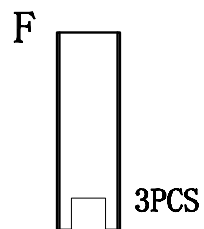

Assembly Instructions

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

1. Carefully remove all parts from the box
2. Remove the mounting bracket (C) from the base (D) by loosening the screws (E)
3. Affix the mounting bracket (C) on the outlet box with the screws (B).
4. **INSURE THE ELECTRICITY SUPPLY IS TURNED OFF**
5. Wrap both safety cables with nipples (A), push the base (D) on the bracket (C) and then affix it with screws (E)
6. Install the bulbs on the sockets, and then install the glass pipes (F) on the sockets according to the illustration
7. Install the bulb on the sockets
8. Installation is complete, turn on power at fuse or circuit breaker.

*****Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents*****

