


PARTS ENCLOSED

- (A) Nut Connector(3)
- (B) Mornting Screws(2)
- (C) Mounting Plate(1)
- (D) Canopy(1)
- (E) Stop screws(5)
- (F) Workpiece(2)
- (G) Cable Line(5)
- (H) Glass Shades(5)
- (I) Plastic screw(5)
- (J) Explosive screws(4)

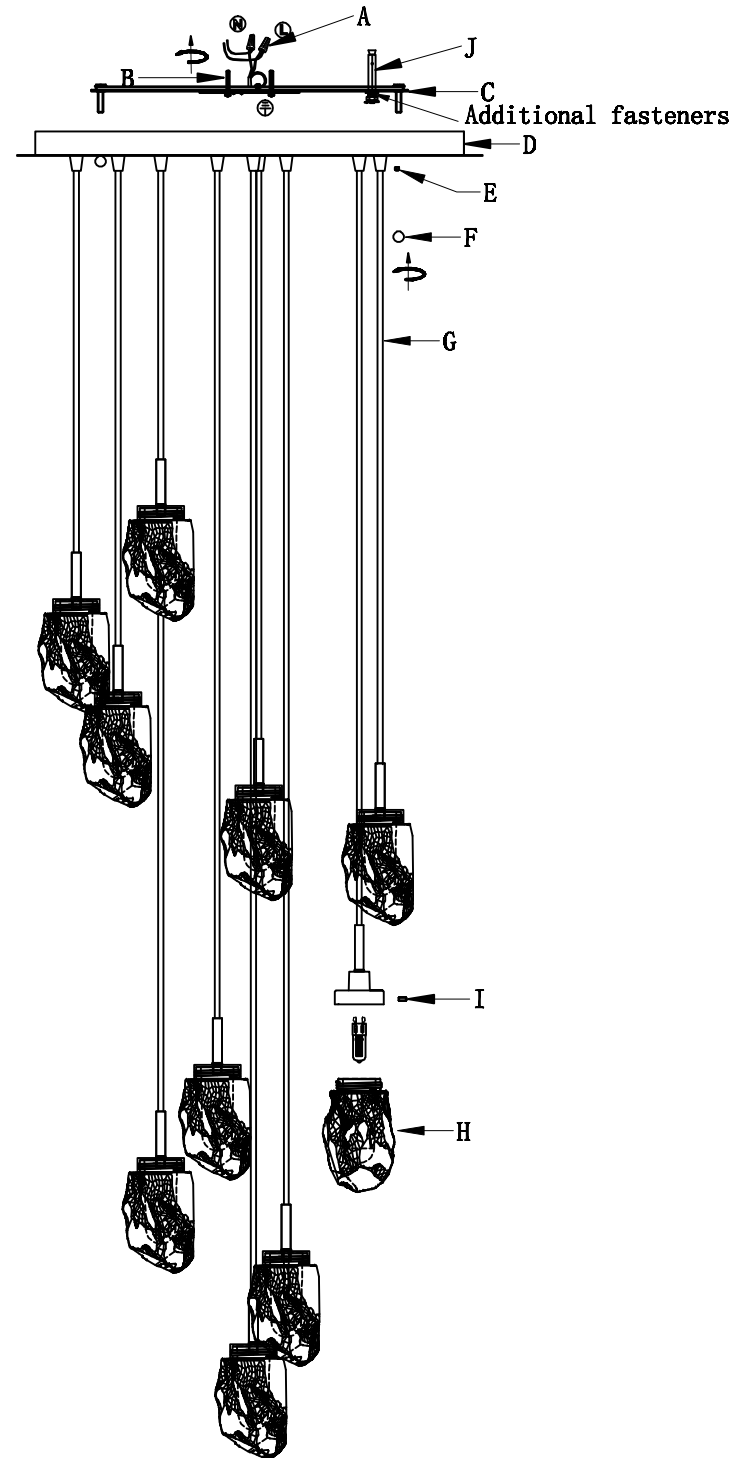

KCH1106R-10 or KCH1106R-10BS


Assembly Instructions

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.


WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

1. Carefully remove all parts from the box.
 2. Determine the required length of the suspension line (G) according to the required height, tighten the instrument screw (E) in the corresponding position to fix the line .
 3. Pass cable through mounting bracket (C) .
 4. INSURE THE ELECTRICITY SUPPLY IS TURNED OFF.
 5. Affix the mounting bracket (C) on the outlet box with screws (B).
 6. After the cable is passed through the screw tube in the middle of the mounting bracket, fix the lamp body on the mounting bracket.
 7. Wrap both safety cables with nipples (A), push the cable into the outlet box.
 8. Screw up the workpiece (F) and fix the top suction plate (D) on the ceiling.
 9. Install the bulbs on the sockets.
 10. Screw the Lampshade (H) on the lamp body and tighten the plastic screw (I).
 11. Installation is complete, turn on power at fuse or circuit breaker.
- Note: To expedite the straightening process of the wires, use both hands to forcefully pull the two ends of each curved wire as much as possible, as it may take some time for them to naturally straighten.

*****Clean with a dry, soft cloth only. Use no harsh abrasives or chemical**

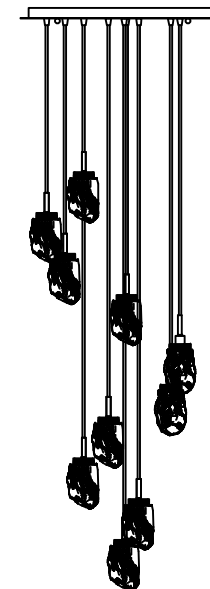

HEIGHT ADJUSTMENT INSTRU-

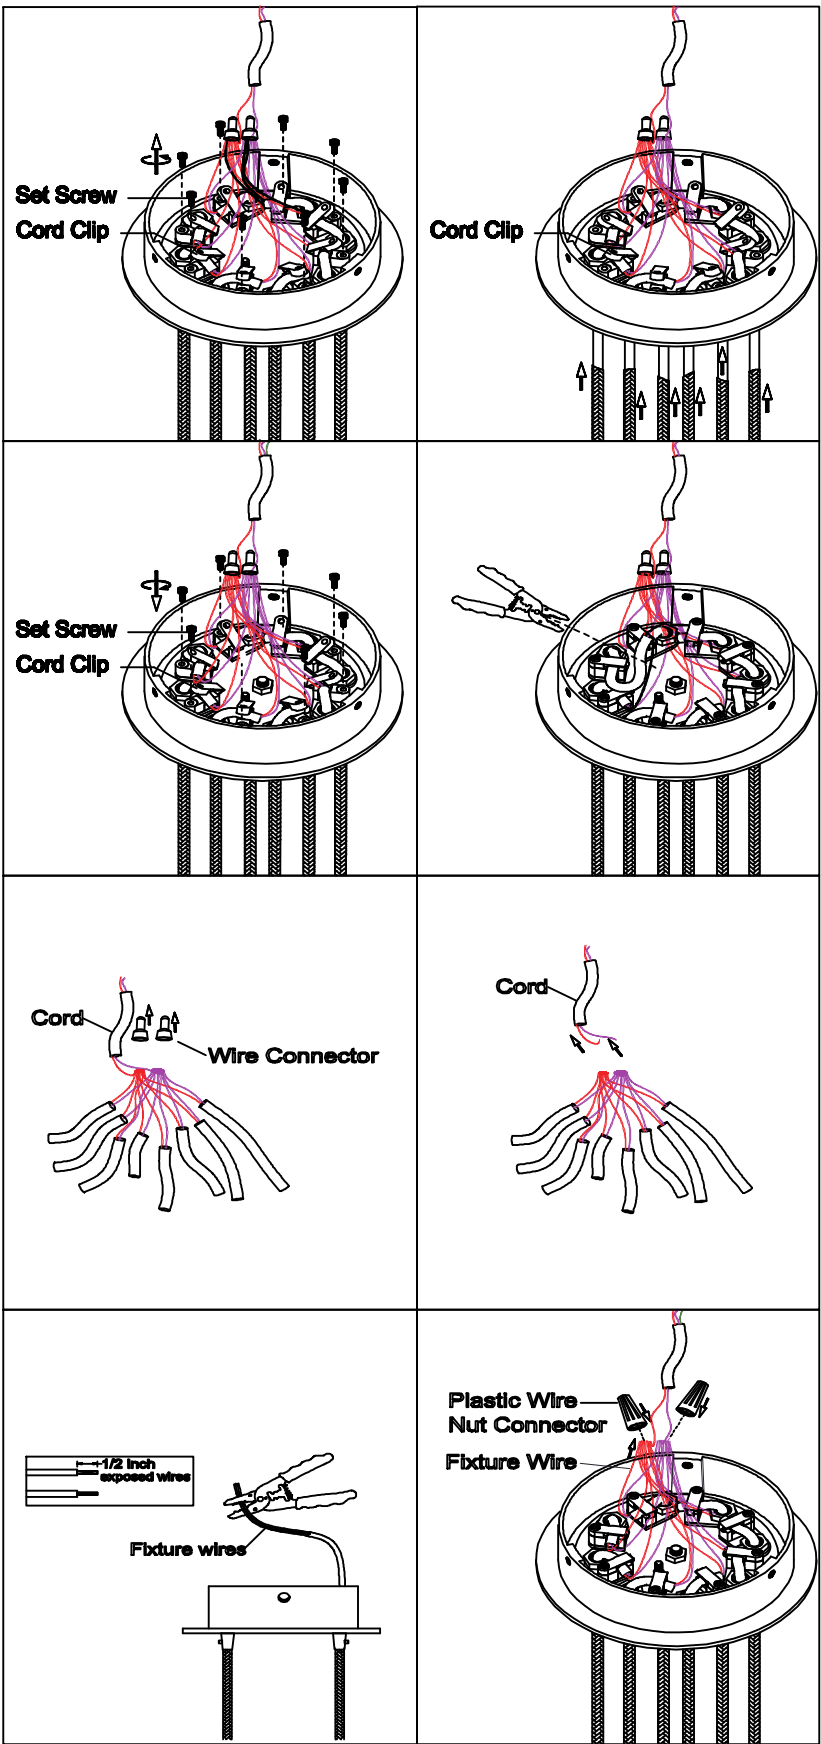

Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents

