



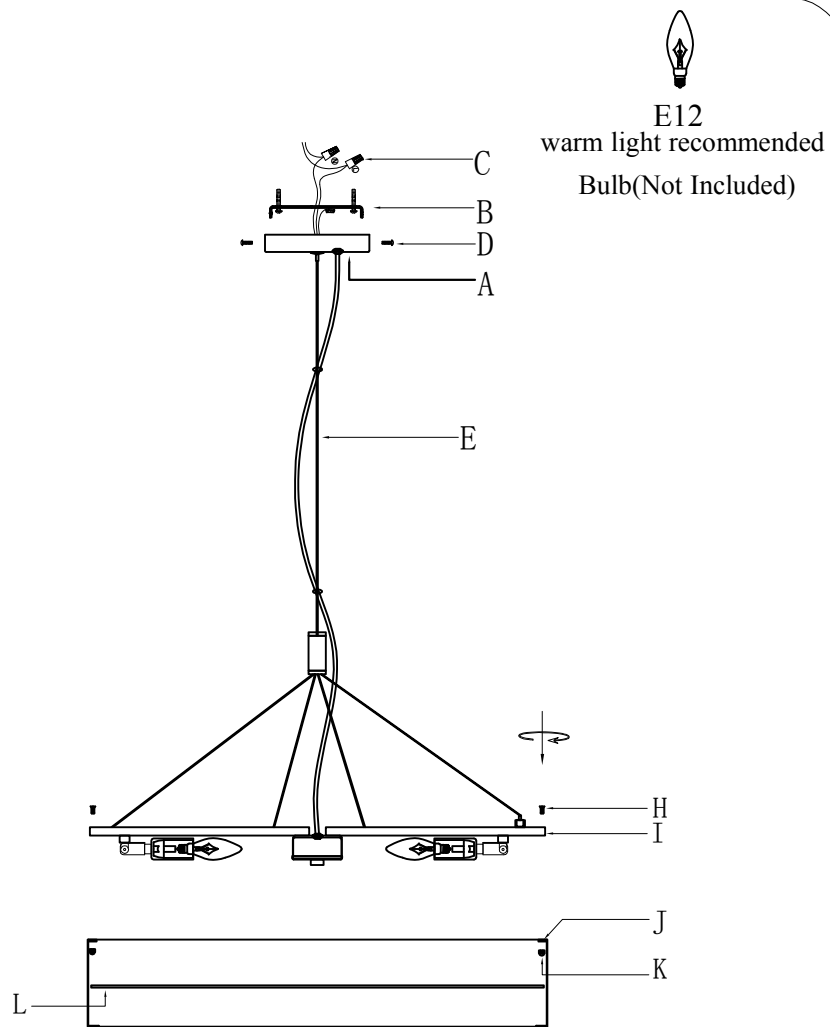

H21101-4G

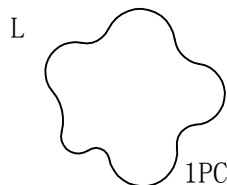

Assembly Instructions

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING *** SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

1. Carefully remove all parts from the box
2. Separate the arm body top part (I) and bottom metal ring part (J) by taking off the screws (H) and the screw nuts (K) with a screwdriver according to the illustration. And then put the glass (L) in the bottom metal ring part (J) and then affix the arm body top part (I) and bottom metal ring part (J) again with the screws (H) and the screw nuts (K) again.
3. Carefully remove all parts from the box
4. Remove the mounting bracket (B) from the canopy (A) by loosening the side screws (D)
5. Adjust the height of cable and safety steel (E) wire you need.
6. SURE THE ELECTRICITY SUPPLY IS TURNED OFF
7. fix the mounting bracket (B) on the outlet box
8. ap both safety cables with nipples (C), push the cable into the outlet box.
9. tach the canopy (A) to the mounting bracket (B) and secure with screws (D)
10. all the bulbs on the sockets
11. tallation is complete , turn on power at fuse or circuit breaker.

Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents

