


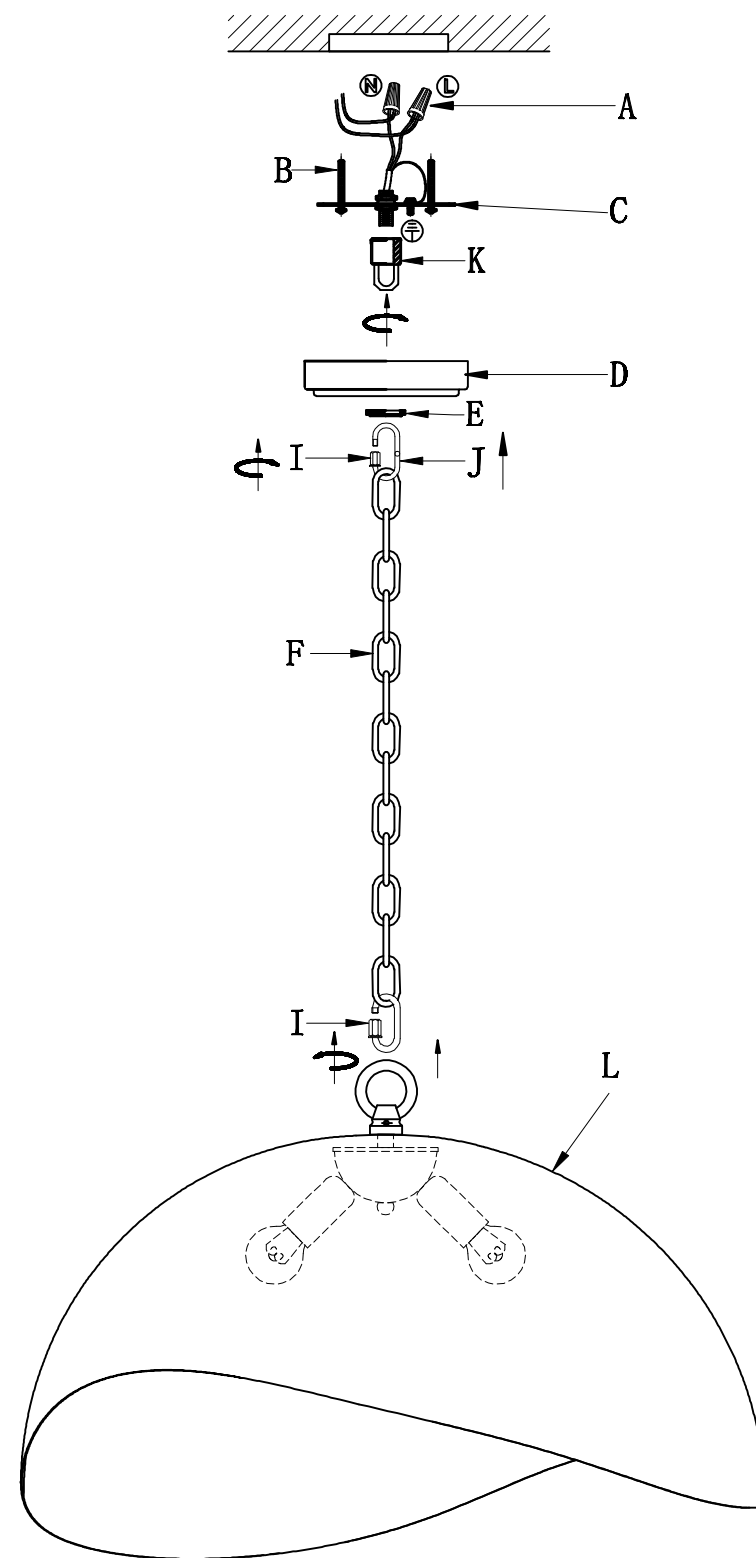

P25110-3

Assembly Instructions

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

1. Carefully remove all parts from the box.
2. Install 1 suspension chains (F). when the suspension chain (F) is installed on the lamp body (L). run the cable through the lifting chain. through the suction cap (D) and through the mounting bracket (C).
3. Tighten the instrument nut (I) at the corresponding position.
5. Fix the mounting bracket (C) on the outlet box with screws (B).
6. After the cable passes through the screw pipe in the middle of the mounting bracket, fix the lamp body on the mounting bracket.
7. Wrap two safety cables with junction box (A) and push the cables into the junction box.
8. Hang the whole lamp from (J) into (K) .
9. Push the suction top plate (D) onto the mounting bracket (C) and secure with the component (E).
10. Install the bulb in the socket.
11. After installation, power on the fuse or circuit breaker.

*****Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents*****