



Kanova & Co.

INSTALLATION INSTRUCTIONS

Installation Guide Standard Chain-Hung Chandelier

Palisade 26" Alabaster Chandelier
ITEM# KCH5200S-26

IMPORTANT SAFETY INSTRUCTIONS

1. These instructions are provided for your safety. Read them carefully and completely before installing the chandelier.
2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH APPLICABLE CODES BY A QUALIFIED PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
3. This fixture requires eight (8) E26-base bulbs, 40 W maximum per bulb (not included).
4. To reduce the risk of fire, do not exceed the maximum wattage shown on the fixture label.
5. Suitable for indoor, dry locations only.
6. Connect only to a grounded, 120 V single-phase branch circuit.
7. Keep the fixture, packaging, and small parts away from children.

WARNING:

- Turn off the electrical supply at the main circuit panel before installation. Verify that the power is off before touching any wiring. Do not restore power until the chandelier is completely assembled and installed.
- To reduce the risk of fire, electric shock, or personal injury, turn off the chandelier and allow it to cool before replacing a bulb. Do not touch a bulb while the fixture is on or look directly at a lit bulb.
- Keep flammable materials away from the bulbs.


PRE-ASSEMBLY:

- Remove all parts and hardware from the carton and protective packaging. Do not discard any contents until installation is complete.
- Due to the fixture's size and weight, a minimum of two qualified installers and an appropriate lifting device are required. Do not lift or suspend the chandelier by its electrical wires.

TOOLS REQUIRED (NOT INCLUDED):

Phillips screwdriver, slotted screwdriver, wire strippers, slip-joint pliers, measuring tape, adjustable wrenches, and wire cutters.

CHANDELIER INSTALLATION

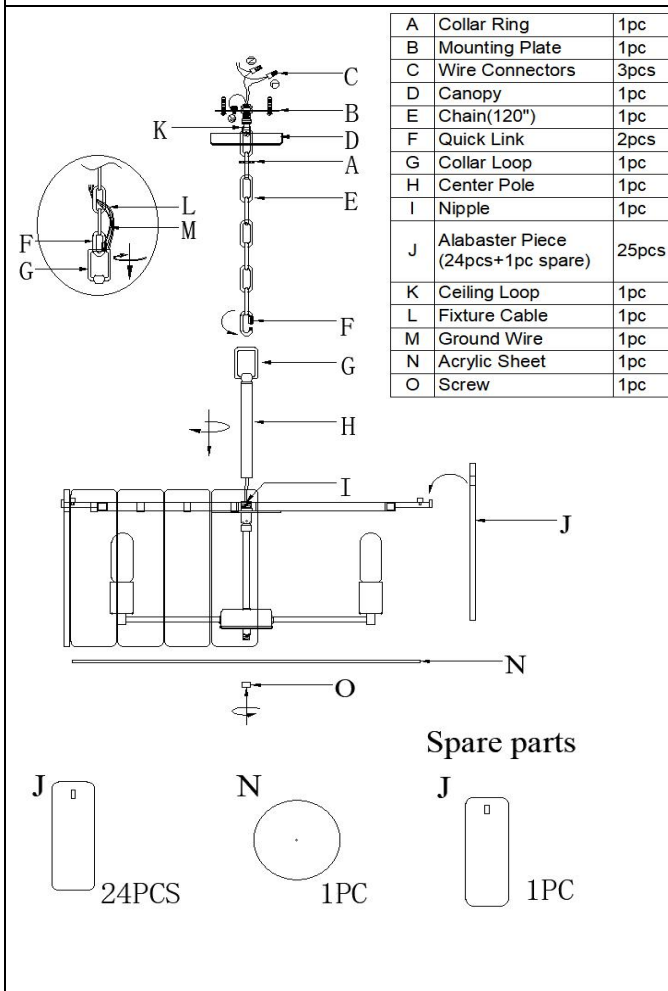

1. **Unpack the Fixture:** Carefully remove all parts from the carton and place them on a clean, soft surface to prevent damage.
2. **Turn Off Power:** Turn off the electrical supply at the main circuit panel and verify that the power is off.
3. **Assemble the Center Pole:** Feed the fixture wires through Center Pole (H), then thread Nipple (I) into the center pole and tighten securely.
4. **Set the Hanging Height and Attach the Chain:** Determine the desired hanging height and shorten Chain (E), if necessary. Using one Quick Link (F), connect the lower end of Chain (E) to Collar Loop (G). Using the second Quick Link (F), connect the upper end of Chain (E) to Ceiling Loop (K). Close and securely tighten both Quick Links (F).
5. **Route the Fixture Wires Through the Upper Components:** Continue routing the Fixture Cable (L) and Ground Wire (M) through Collar Loop (G). Weave the wires through Chain (E), then route them through Ceiling Loop (K) and Canopy (D). Leave sufficient wire length for the electrical connections. Do not twist, pinch, or damage the wires.
6. **Prepare the Mounting System:** Remove Mounting Plate (B) from Canopy (D) by loosening Collar Ring (A). Secure Mounting Plate (B) to a listed outlet box and a structural support system rated for the full fixture load using the designated mounting screws.
7. **Prepare the Fixture Wires:** Carefully unwind the fixture wires. Trim excess wire while leaving sufficient length to reach the junction box. Strip approximately 5/8 in. (16 mm) of insulation from the end of each wire.
8. **Make the Electrical Connections:** Connect the fixture ground wire (bare copper or green) to the building ground wire with the supplied wire connector.
 - Connect the fixture neutral wire, labeled "N," to the white building neutral wire.
 - Connect the fixture hot wire, labeled "L," to the black building hot wire.**CAUTION:** Do not reverse the hot and neutral connections.
9. **Complete the Wiring and Install the Canopy:** Confirm that all wire connectors are tight and place the wires inside the junction box without pinching them. Raise Canopy (D) and secure it by tightening Collar Ring (A) onto Ceiling Loop (K). Confirm that the canopy sits flush against the ceiling.
10. **Level and Inspect the Fixture:** Confirm that the fixture is level and that Canopy (D) sits flush against the ceiling. Verify that the center pole, screws, threaded connections, and mounting hardware are securely fastened.
11. **Install the Bulbs:** Install eight (8) E26-base bulbs, 40 W maximum per bulb. Do not exceed the wattage shown on the fixture label. Keep the power off during installation.
12. **Install the Acrylic Sheet and Decorative Alabaster Pieces:** Remove Screw (O) from the fixture body. Position Acrylic Sheet (N) at the bottom of the fixture, as shown in the assembly diagram, and secure it with Screw (O). Tighten the screw only until the acrylic sheet is secure. Do not overtighten. Next, beginning at the lowest level of the fixture, install each of the 24 Decorative Alabaster Pieces (J) as shown in the assembly diagram. Continue upward until all alabaster pieces have been installed.
13. **Final Inspection and Testing:** Confirm that Acrylic Sheet (N) and all decorative alabaster pieces are securely installed, all tools and packaging have been removed, and no wires are exposed or pinched. Restore power and test the fixture.

Maintenance

- **Disconnect power before cleaning.**
- **Clean with a soft dry cloth only.**
- **Periodically inspect chain links, quick links, and mounting hardware to ensure they remain secure.**
- **Do not use abrasive cleaners or solvents.**

INSTALLATION CHECKLIST:

- ☐ Outlet box securely fastened to building structure
- ☐ Mounting plate securely installed
- ☐ Suspension chain and quick links securely fastened
- ☐ Fixture hanging level
- ☐ Electrical connections completed
- ☐ Ground wire connected
- ☐ Wire connectors secure
- ☐ Wiring safely tucked into junction box
- ☐ Canopy installed flush to ceiling
- ☐ Acrylic sheet and decorative alabaster pieces installed securely
- ☐ Fixture tested successfully