

IMPORTANT SAFETY INSTRUCTIONS

- These instructions are provided for your safety. Read them carefully and completely before installing the chandelier.
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH APPLICABLE CODES BY A QUALIFIED PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.**
- This fixture requires five (5) E12-base bulbs, 40 W maximum per bulb (not included).
- To reduce the risk of fire, do not exceed the maximum wattage shown on the fixture label.
- Suitable for indoor, dry locations only.
- Connect only to a grounded, 120 V single-phase branch circuit.
- Keep the fixture, packaging, and small parts away from children.

WARNING:

- Turn off the electrical supply at the main circuit panel before installation. Verify that the power is off before touching any wiring. Do not restore power until the chandelier is completely assembled and installed.
- To reduce the risk of fire, electric shock, or personal injury, turn off the chandelier and allow it to cool before replacing a bulb. Do not touch a bulb while the fixture is on or look directly at a lit bulb.
- Keep flammable materials away from the bulbs.

PRE-ASSEMBLY:


- Remove all parts and hardware from the carton and protective packaging. Do not discard any contents until installation is complete.
- Due to the fixture's size and weight, a minimum of two qualified installers and an appropriate lifting device are required. Do not lift or suspend the chandelier by its electrical wires.

TOOLS REQUIRED (NOT INCLUDED):

Phillips screwdriver, slotted screwdriver, wire strippers, slip-joint pliers, measuring tape, adjustable wrenches, and wire cutters.

CHANDELIER INSTALLATION

A	Wire Connectors	3pcs
B	Mounting Plate	1pc
C	Mounting Screws	2pcs
D	Ground Screw	1pc
E	Canopy	1pc
F	Finial	2pcs
G	Collar Loop	2pcs
H	Chain(120")	2pcs
I	Quick Link	4pcs
J	Fixture Loop	2pcs
K	Center Pole	2pcs
L	Nipple	2pcs
M	Outer Ring	5pcs
N	Shade	5pcs
O	Fixture Body	1pc

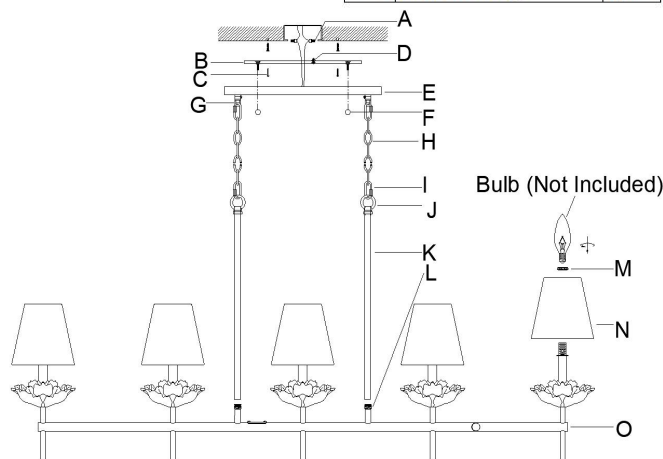

- Unpack the Fixture:** Carefully remove all parts from the carton and place them on a clean, soft surface to prevent damage.
- Turn Off Power:** Turn off the electrical supply at the main circuit panel and verify that the power is off.
- Assemble the Center Poles:** Feed the fixture wires through both Center Poles (K), then thread one Nipple (L) into each center pole and tighten securely.
- Set the Hanging Height and Attach the Chains:** Determine the desired hanging height and shorten both Chains (H) equally, if necessary. Using one Quick Link (I), connect the lower end of each Chain (H) to a Fixture Loop (J). Using a second Quick Link (I), connect the upper end of each chain to a Collar Loop (G). Close and securely tighten all four Quick Links (I). Ensure that both chains are equal in length.
- Route the Fixture Wires Through the Upper Components:** Route the fixture wires and ground wire through the Fixture Loops (J). Weave the wires through the Chains (H), then route them through the Collar Loops (G) and Canopy (E). Leave sufficient wire length for the electrical connections. Do not twist, pinch, or damage the wires.
- Prepare the Mounting System:** Remove Mounting Plate (B) from Canopy (E) by loosening Finials (F). Secure Mounting Plate (B) to a listed outlet box using Mounting Screws (C). Ensure that the outlet box is securely fastened and suitable for supporting the fixture weight.
- Prepare the Fixture Wires:** Carefully unwind the fixture wires. Trim excess wire while leaving sufficient length to reach the junction box. Strip approximately 5/8 in. (16 mm) of insulation from the end of each wire.
- Make the Electrical Connections:** Connect the fixture ground wire (bare copper or green) to the building ground wire with the supplied wire connector.
 - Connect the fixture neutral wire, labeled "N," to the white building neutral wire.
 - Connect the fixture hot wire, labeled "L," to the black building hot wire.**CAUTION:** Do not reverse the hot and neutral connections.
- Complete the Wiring and Install the Canopy:** Confirm that all wire connectors are tight, then carefully place the wires inside the junction box without pinching them. Raise Canopy (E) to the ceiling and secure it to Mounting Plate (B) by tightening Finials (F) onto Mounting Screws (C). Confirm that the canopy sits flush against the ceiling.
- Level and Inspect the Fixture:** Confirm that the fixture is level and that Canopy (E) sits flush against the ceiling. Verify that both center poles, screws, threaded connections, and mounting hardware are securely fastened.
- Install the Bulbs:** Install five (5) E12-base bulbs, 40 W maximum per bulb. Do not exceed the wattage shown on the fixture label. Keep the power off during installation.
- Install the Decorative Shades:** Place each Decorative Shade (N) over its socket and secure it with an Outer Ring (M), as shown in the assembly diagram. Repeat until all five shades are securely installed. Do not overtighten.
- Final Inspection and Testing:** Confirm that all decorative shades are securely installed, all tools and packaging have been removed, and no wires are exposed or pinched. Restore power and test the fixture.

Maintenance

- Disconnect power before cleaning.
- Clean with a soft dry cloth only.
- Periodically inspect chain links, quick links, and mounting hardware to ensure they remain secure.
- Do not use abrasive cleaners or solvents.

INSTALLATION CHECKLIST:

- ☐ Outlet box securely fastened to building structure
- ☐ Mounting plate securely installed
- ☐ Suspension chains and quick links securely fastened
- ☐ Fixture hanging level
- ☐ Electrical connections completed
- ☐ Ground wire connected
- ☐ Wire connectors secure
- ☐ Wiring safely tucked into junction box
- ☐ Canopy installed flush to ceiling
- ☐ Decorative shades installed securely
- ☐ Fixture tested successfully