



Kanova & Co.

INSTALLATION INSTRUCTIONS

Installation Guide

Standard Rod-Hung Chandelier

Noturne Chandelier - Small
ITEM# KCH5180-28

IMPORTANT SAFETY INSTRUCTIONS

1. These instructions are provided for your safety. Read them carefully and completely before installing the chandelier.
2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH APPLICABLE CODES BY A QUALIFIED PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
3. This fixture requires nine (9) E12-base bulbs, 40 W maximum per bulb (not included).
4. To reduce the risk of fire, do not exceed the maximum wattage shown on the fixture label.
5. Suitable for indoor, dry locations only.
6. Connect only to a grounded, 120 V single-phase branch circuit.
7. Keep the fixture, packaging, and small parts away from children.

WARNING:

- Turn off the electrical supply at the main circuit panel before installation. Verify that the power is off before touching any wiring. Do not restore power until the chandelier is completely assembled and installed.
- To reduce the risk of fire, electric shock, or personal injury, turn off the chandelier and allow it to cool before replacing a bulb. Do not touch a bulb while the fixture is on or look directly at a lit bulb.
- Keep flammable materials away from the bulbs.

PRE-ASSEMBLY:

- Remove all parts and hardware from the carton and protective packaging. Do not discard any contents until installation is complete.
- Due to the fixture's size and weight, a minimum of two qualified installers and an appropriate lifting device are required. Do not lift or suspend the chandelier by its electrical wires.


TOOLS REQUIRED (NOT INCLUDED):

Phillips screwdriver, slotted screwdriver, wire strippers, slip-joint pliers, measuring tape, adjustable wrenches, and wire cutters.

CHANDELIER INSTALLATION

A	Collar Ring	1pc
B	Mounting Plate	1pc
C	Wire Connectors	3pcs
D	Canopy	1pc
E	Rod (8")	1pc
F	Rod (16")	4pcs
G	Nipple	1pc
H	Glass	3pcs
I	Screw	24pcs
J	Glass	6pcs
K	Glass	3pcs
L	Plastic Washer	36pc
Q	Quick Link	1pc

1. **Unpack the Fixture:** Carefully remove all parts from the carton and place them on a clean, soft surface to prevent damage.
2. **Turn Off Power:** Turn off the electrical supply at the main circuit panel and verify that the power is off.
3. **Adjust the Hanging Height and Route the Wires:** Select Rods (E) and (F) as needed to obtain the desired hanging height. Carefully feed the fixture wires through the selected rods before connecting the rods. Connect the rods, then securely thread the rod assembly onto Nipple (G). Do not twist, pinch, or damage the wires.
4. **Connect the Rod Assembly:** Open Quick Link (Q), connect the upper end of the rod assembly to Canopy (D), and then close and securely tighten Quick Link (Q).
5. **Prepare the Mounting System:** Remove Mounting Plate (B) from Canopy (D) by loosening Collar Ring (A). Secure Mounting Plate (B) to a listed outlet box and a structural support system rated for the full fixture load using the designated mounting screws.
6. **Prepare the Fixture Wires:** Carefully unwind the fixture wires. Trim excess wire while leaving sufficient length to reach the junction box. Strip approximately 5/8 in. (16 mm) of insulation from the end of each wire.
 - Connect the fixture ground wire (bare copper or green) to the building ground wire with the supplied wire connector.
 - Connect the fixture neutral wire, labeled "N," to the white building neutral wire.
 - Connect the fixture hot wire, labeled "L," to the black building hot wire.**CAUTION:** Do not reverse the hot and neutral connections.
8. **Complete the Wiring:** Confirm that all wire connectors are tight. Carefully place the conductors inside the junction box. Ensure that no wires are pinched or in contact with sharp edges.
9. **Install the Canopy:** Raise Canopy (D) to the ceiling and secure it to Mounting Plate (B) by tightening Collar Ring (A). Confirm that the canopy sits flush against the ceiling.
10. **Level and Inspect the Fixture:** Confirm that the fixture hangs straight and level. Verify that all rods, quick links, threaded connections, and mounting hardware are securely fastened.
11. **Install the Bulbs:** Install nine (9) E12-base bulbs, 40 W maximum per bulb. Do not exceed the wattage shown on the fixture label. Keep the power off during installation.
12. **Install the Decorative Glass Pieces:** Beginning with the upper tier, use Plastic Washers (L) and Screws (I) to secure Glass Pieces (H) at Frame Points (M). Next, secure Glass Pieces (J) at Frame Points (N) and (O) in the same manner. Finally, secure Glass Pieces (K) at Frame Points (P) using Screws (I), as shown in the assembly diagram. If a glass piece is not secure with one plastic washer, add one spare Plastic Washer (L). Continue downward until all glass pieces have been installed.
13. **Final Inspection and Testing:** Confirm that all decorative glass pieces are securely installed and evenly spaced, all tools and packaging have been removed, and no wires are exposed or pinched. Restore power and test the fixture.

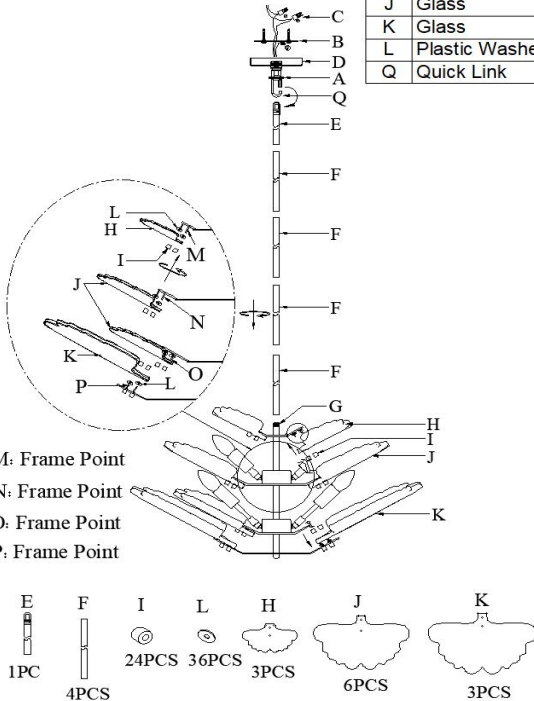

Maintenance

- Disconnect electrical power before cleaning or servicing the fixture.
- Clean with a soft, dry cloth only.
- Periodically inspect the rods, quick link, and mounting hardware to confirm that they remain secure.
- Do not use abrasive cleaners, solvents, or chemical cleaning products.

INSTALLATION CHECKLIST:

- ☐ Outlet box and structural support system are securely fastened and rated for the full fixture load.
- ☐ Mounting plate is securely installed
- ☐ Suspension rods, quick links, and threaded connections are securely tightened
- ☐ Fixture hangs straight and level
- ☐ Electrical connections are complete and correctly matched
- ☐ Ground wire is connected
- ☐ Wire connectors are secure
- ☐ Wiring is safely placed inside the junction box without pinching
- ☐ Canopy is installed flush against the ceiling
- ☐ All decorative glass pieces are securely installed
- ☐ Fixture has been tested and operates correctly