

IMPORTANT SAFETY INSTRUCTIONS

- These instructions are provided for your safety. Read them carefully and completely before installing the chandelier.
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH APPLICABLE CODES BY A QUALIFIED PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.**
- This fixture requires seven (7) E12-base bulbs, 40 W maximum per bulb (not included).
- To reduce the risk of fire, do not exceed the maximum wattage shown on the fixture label.
- Suitable for indoor, dry locations only.
- Connect only to a grounded, 120 V single-phase branch circuit.
- Keep the fixture, packaging, and small parts away from children.

WARNING:

- Turn off the electrical supply at the main circuit panel before installation. Verify that the power is off before touching any wiring. Do not restore power until the chandelier is completely assembled and installed.
- To reduce the risk of fire, electric shock, or personal injury, turn off the chandelier and allow it to cool before replacing a bulb. Do not touch a bulb while the fixture is on or look directly at a lit bulb.
- Keep flammable materials away from the bulbs.



PRE-ASSEMBLY:

- Remove all parts and hardware from the carton and protective packaging. Do not discard any contents until installation is complete.
- Due to the fixture's size and weight, a minimum of two qualified installers and an appropriate lifting device are required. Do not lift or suspend the chandelier by its electrical wires.

TOOLS REQUIRED (NOT INCLUDED):

Phillips screwdriver, slotted screwdriver, wire strippers, slip-joint pliers, measuring tape, adjustable wrenches, and wire cutters.

CHANDELIER INSTALLATION

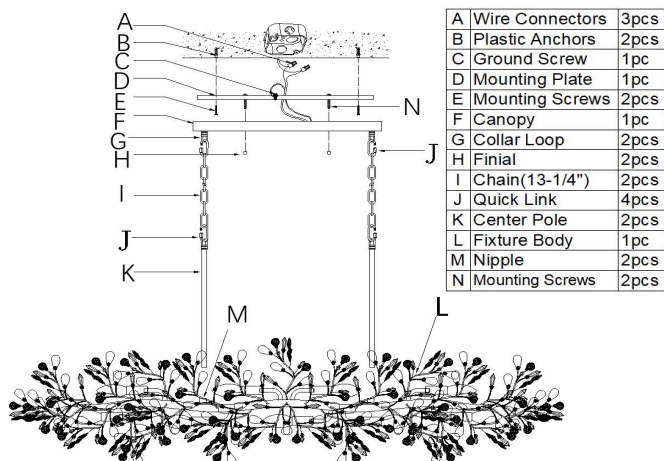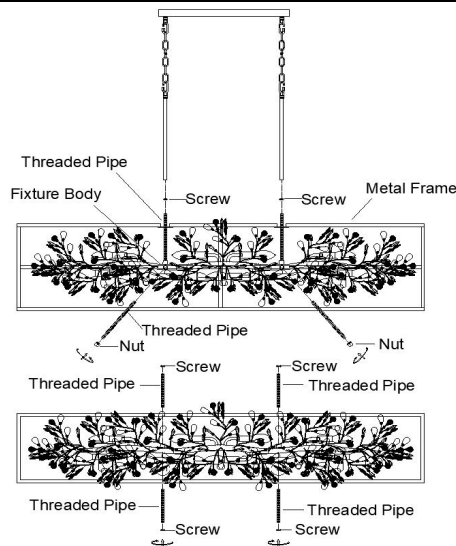

- Unpack the Fixture:** Carefully remove all parts from the carton and place them on a clean, soft surface to prevent damage.
- Support the Fixture Body:** Hold Fixture Body securely to prevent it from dropping during removal.
- Release the Fixture Body:** Remove the Nuts from both sides of Metal Frame. Loosen the Screws and unthread the Threaded Pipes securing Fixture Body to the frame, as shown in the illustration.
- Remove the Fixture Body:** Carefully lift Fixture Body out of Metal Frame. Do not pull, bend, or damage the decorative branches or fixture wires.
- Turn Off Power:** Turn off the electrical supply at the main circuit panel and verify that the power is off.
- Assemble the Center Poles:** Feed the fixture wires through one of the two Center Poles (K). Securely thread the lower end of each Center Pole (K) onto the corresponding Nipple (M). Using two Quick Links (J), connect the lower end of each Chain (I) to the upper end of the corresponding Center Pole (K).
- Set the Hanging Height and Attach the Chains:** Determine the desired hanging height and shorten both Chains (I) equally, if necessary. Using two Quick Links (J), connect the upper end of each Chain (I) to the corresponding Collar Loop (G). Close and securely tighten all Quick Links (J). Ensure that both chains are equal in length.
- Route the Fixture Wires Through the Upper Components:** Route the fixture wires and ground wire along the Quick Links (J) and Chains (I), then through the Collar Loops (G) and Canopy (F). Leave sufficient wire length for the electrical connections. Do not twist, pinch, or damage the wires.
- Prepare the Mounting System:** Remove Mounting Plate (D) from Canopy (F) by loosening the two Finials (H). Secure Mounting Plate (D) to the listed outlet box using suitable outlet-box mounting screws. Install the two Plastic Anchors (B) and two Mounting Screws (E) at the indicated auxiliary mounting points, as shown. Ensure that the outlet box and ceiling structure are suitable for supporting the fixture weight.
- Prepare the Fixture Wires:** Carefully unwind the fixture wires. Trim excess wire while leaving sufficient length to reach the junction box. Strip approximately 5/8 in. (16 mm) of insulation from the end of each wire.
- Make the Electrical Connections:** Connect the fixture ground wire (bare copper or green) to the building ground wire with the supplied wire connector.
 - Connect the fixture neutral wire, labeled "N," to the white building neutral wire.
 - Connect the fixture hot wire, labeled "L," to the black building hot wire.**CAUTION:** Do not reverse the hot and neutral connections.
- Complete the Wiring and Install the Canopy:** Confirm that all wire connectors are tight, then carefully place the wires inside the junction box without pinching them. Raise Canopy (F), align it with the two mounting screws extending from Mounting Plate (D), and secure it with Mounting Screws (N) and Finials (H). Confirm that the canopy sits flush against the ceiling.
- Level and Inspect the Fixture:** Confirm that the fixture is level and that Canopy (F) sits flush against the ceiling. Verify that both center poles, screws, threaded connections, and mounting hardware are securely fastened.
- Install the Bulbs:** Install seven (7) E12-base bulbs, 40 W maximum per bulb. Do not exceed the wattage shown on the fixture label. Keep the power off during installation.
- Final Inspection and Testing:** Confirm that all tools and packaging have been removed, and no wires are exposed or pinched. Restore power and test the fixture.

Maintenance

- Disconnect power before cleaning.
- Clean with a soft dry cloth only.
- Periodically inspect chain links, quick links, and mounting hardware to ensure they remain secure.
- Do not use abrasive cleaners or solvents.

INSTALLATION CHECKLIST:

- ☐ Outlet box securely fastened to building structure
- ☐ Mounting plate securely installed
- ☐ Suspension chains and quick links securely fastened
- ☐ Fixture hanging level
- ☐ Electrical connections completed
- ☐ Ground wire connected
- ☐ Wire connectors secure
- ☐ Wiring safely tucked into junction box
- ☐ Canopy installed flush against the ceiling
- ☐ Fixture tested successfully