




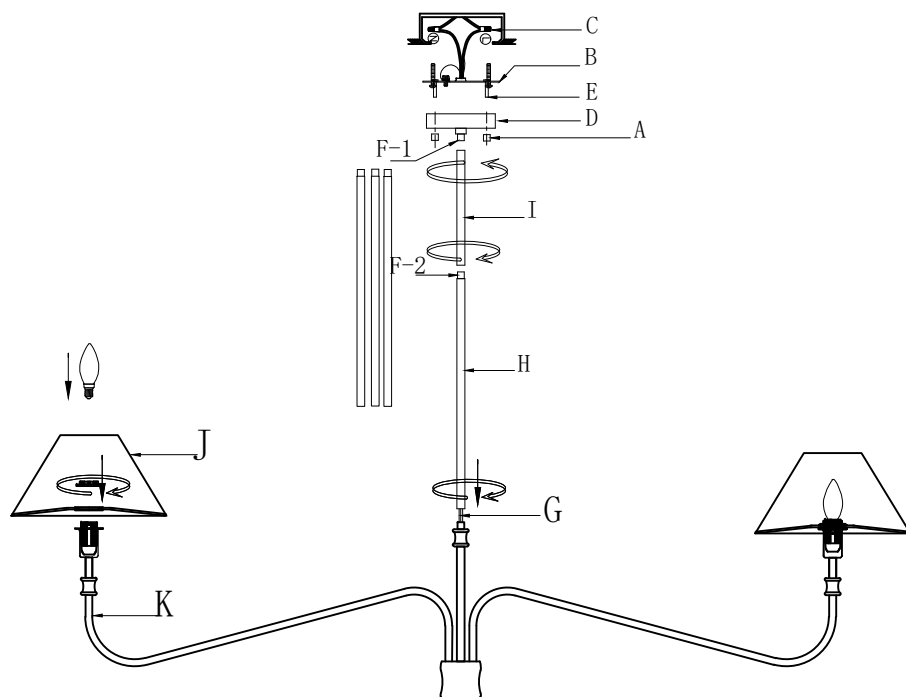


H25105L-6

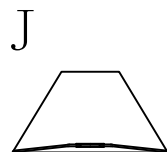


<6 clusters>



<4 clusters>



<1 cluster>

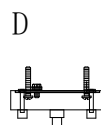

<1 cluster>

Assembly Instructions

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING *** SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

1. Carefully remove all parts from the box
2. Take out the light fixture (K).
3. Take out the straight pipes (H) and (I), select the number of straight pipes according to the actual height, pass the cable (G) through the straight pipes (H) and (I), and screw the straight pipes on the plug (F-2).
4. Take out the disk (D), loosen the iron pillar (A), remove the mounting bracket (B), and fix the mounting bracket (B) on the cable outlet box.
5. Thread the cable through the disc (D) and screw the plug (F-1) onto the straight tube (I).
6. Wrap both safety cable with nipples (C), push the cable into the outlet box.
7. Align the disk (D) with the dental canal (E) and screw it onto the dental canal (E) with an iron post (A).
8. Take out the cloth cover (J), place it on the lamp holder and tighten it with the outer ring.
9. Install the bulbs on the sockets.
10. Installation is complete, turn on power at fuse or circuit breaker.

Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents

